




Instruction Manual

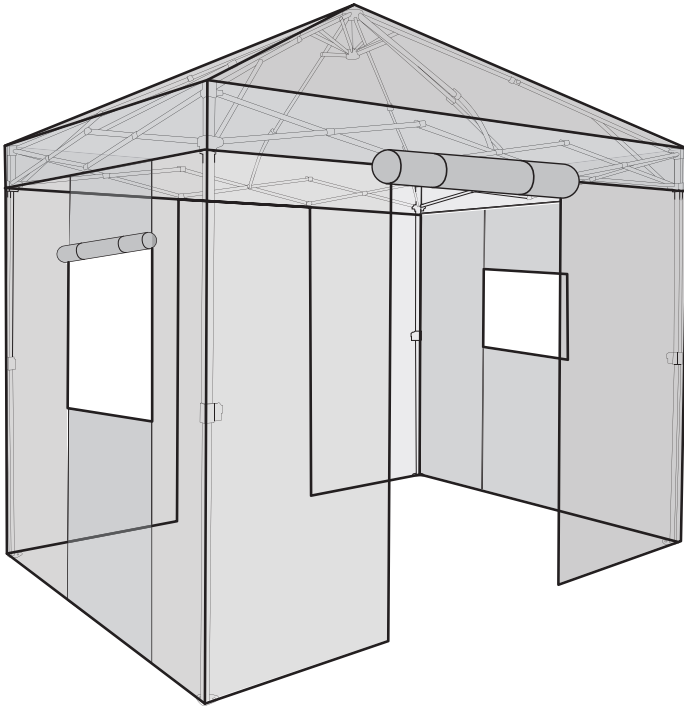

SKU: 20JSEF00522

**EzyFast Walk-in Greenhouse
2x3m (6.5'x10')**

WARRANTY

Warranty Information

Limited Manufacturer's Warranty

EZYFAST warrants to the original retail purchaser this product to be free from manufacturing defects in material or workmanship for a period of 6 months from original date of purchase. This warranty applies only for normal and expected uses, as determined by the manufacturer. The warranty applies only to the original purchaser who made purchase from authorized dealers. Original receipt or proof of purchase as well as proof of defect is required. At its discretion, EZYFAST may provide replacement parts for defective parts to original purchaser after its own review and examination. EZYFAST will not be responsible for shipping costs incurred outside the country of purchase. Warranty is valid for the original purchaser for 6 months from the date of purchase and is not transferable.

WARRANTY RETURN ADVISORY — Before returning any part or product to EZYFAST or its designated representative, please contact customer support at service@ezyfast.net to obtain prior authorization and shipping instruction. Our Customer Support will determine whether a return is required and may request pictures of the unit in place of a return. All shipping costs must be prepaid, and EZYFAST is not responsible for products damaged in transit.

What's not covered by this warranty

This warranty does not cover normal wear and tear, abuse or misuse of this product. This warranty does not apply to damages caused by wind, rain, or other forces of nature, nor to accidental or deliberated damage of the product, nor to use of the product that does not conform with the product instructions including disregard of the safety and maintenance instructions. It is your responsibility to read and save the instructions before attempting to set up your canopy.

This warranty does not cover damage caused by accident or unexpected events (e.g. fire, lighting, floods) or damage caused by transport.

This warranty shall be void as to any product which has been altered or modified in any manner.

Certain regions are extreme on canopy tops of any kind. If you live in Arizona, Florida, Nevada, New Mexico, Texas, Hawaii or altitudes above 3000 feet the warranty period for your canopy top and sidewalls will be limited to 3 months from the date of original purchase.


This warranty does not cover any product purchased through non authorized dealers and/or online auction websites.

This product is designed and intended for temporary usage. Prolonged exposure to UV rays will cause any fabric to fade and deteriorate and is NOT covered by this Limited Warranty. All replacement products or parts will assume the remaining warranty of the original product.

EZYFAST does not warrant against and under no circumstances shall EZYFAST be liable or responsible for any personal loss, injury, or direct or indirect incidental or consequential damages resulting from the use of this product.

PACKING INCLUDES

Part List

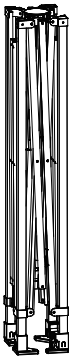

A - Canopy Frame (1pc)



B - Canopy Top With Sidewalls (1pc)

Hardware



AA - Stake (10pcs)



BB - Spiral Stake (4pcs)




CC - Rope (4pcs)

SET UP THE CANOPY




Step 1 OPEN THE CANOPY FRAME

- Lift and partially pull the canopy frame apart.

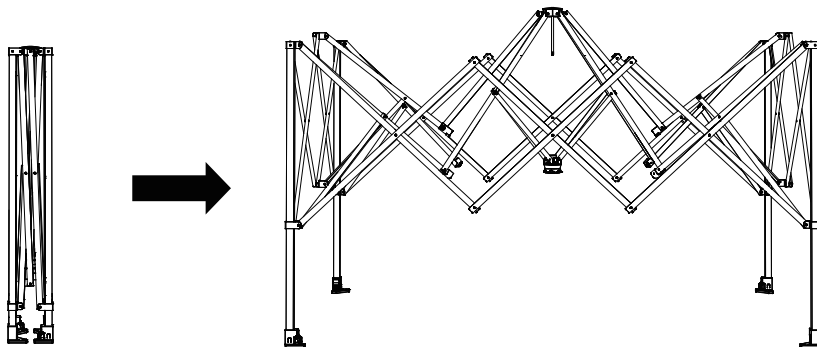

Step 2 ATTACH THE CANOPY TOP




- Unfold the canopy top, unzip the door and place on top of the canopy frame. Avoid the peak cap hooking the lining of the canopy top

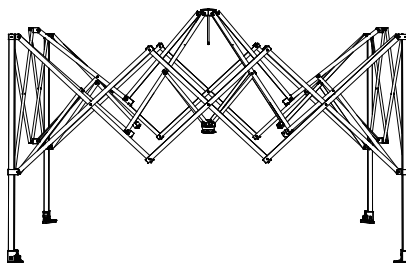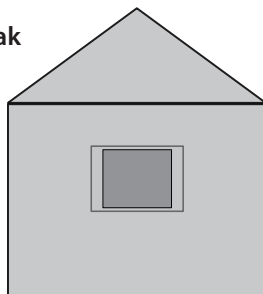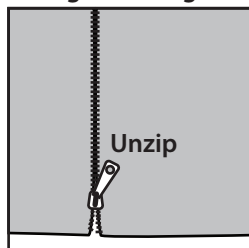

SET UP THE CANOPY



Step 3 LOCK THE FRAME

- From under the canopy, use one hand to push the central bottom hub straight up until it clicks into the central pole.

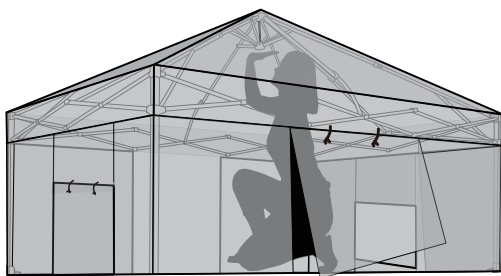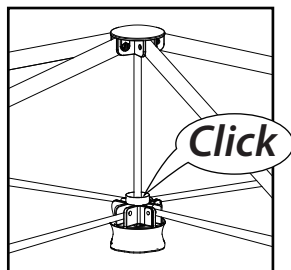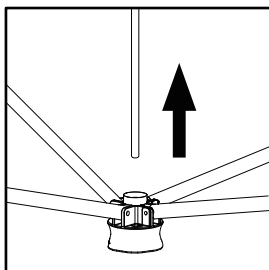

Step 4 ADJUST THE CANOPY HEIGHT




- Press the push button on each leg and raise or lower to adjust the canopy height.

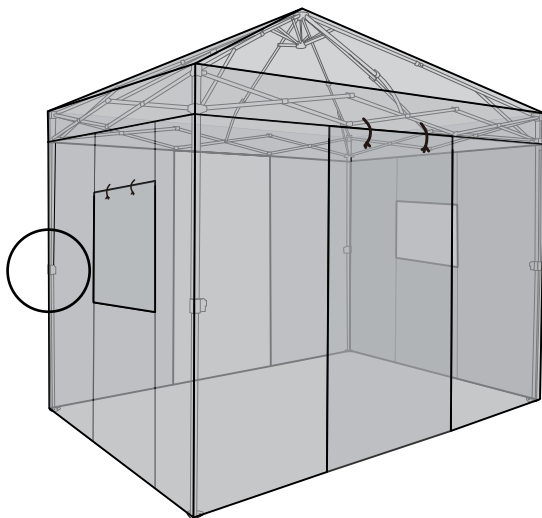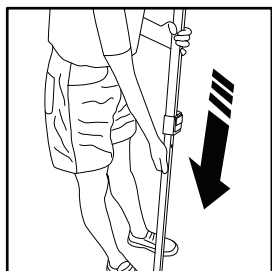

SET UP THE CANOPY

Step 5 VELCRO CONNECTION






- Secure the canopy top to the legs of the canopy frame using the Velcro connections.

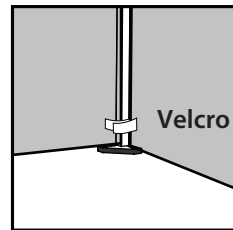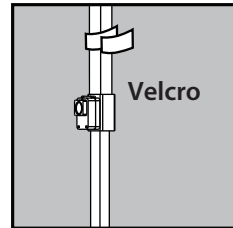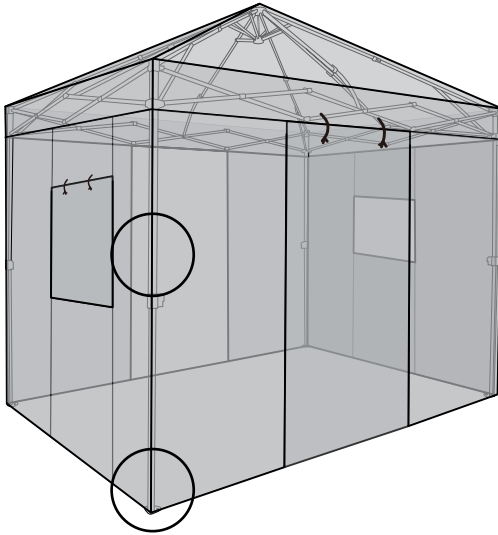

SET UP THE CANOPY



Step 6 SECUR THE CANOPY IN PLACE

- Unzip the doors and insert a spiral stake into the footpad of each canopy leg.
- Insert stakes into the loops at bottom of sidewall.
- Tie four ropes to the corners of the top fabric. Measure out from the each leg to a proper distance and secure four stakes to the ground. Tie the ropes to the stakes in the ground. Ensure the rope has the proper tension by adjusting the plastic adjusters on the ropes.

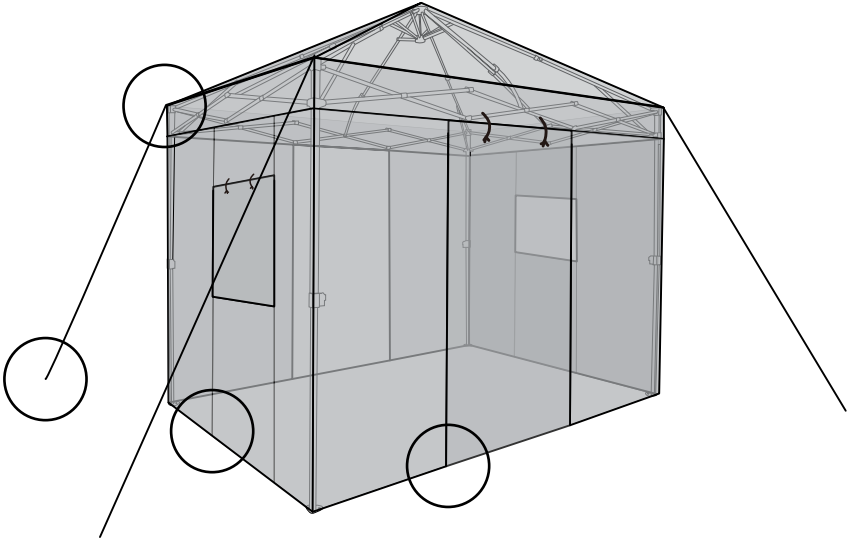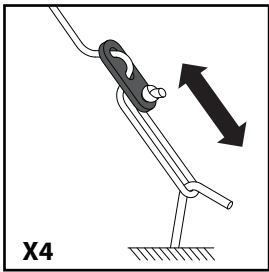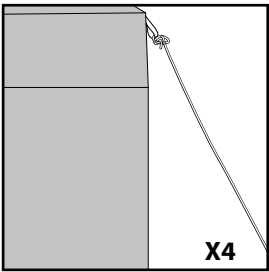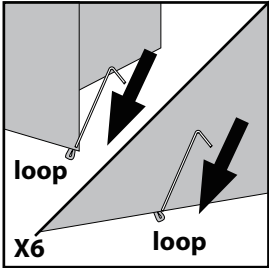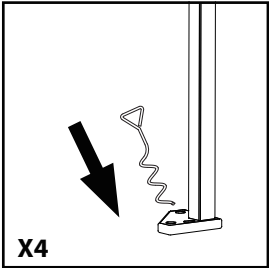





ROLL UP THE DOOR PANEL

- Roll up the door panel when needed. Secure with oval toggle.

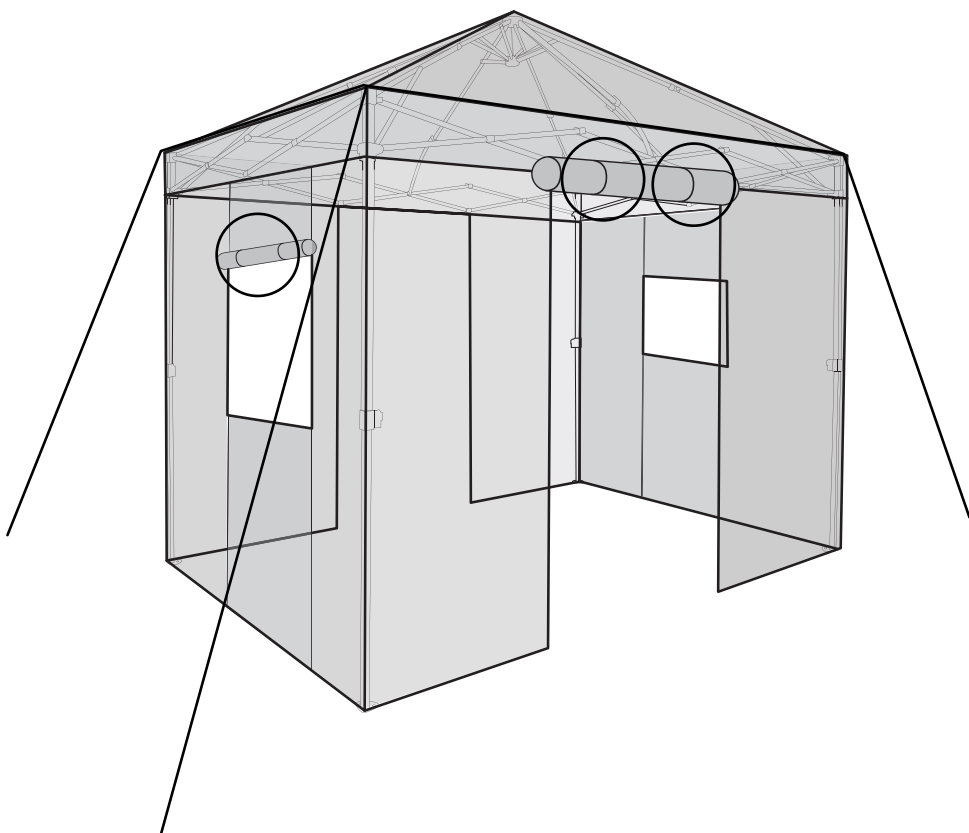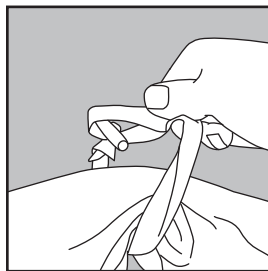

TAKE DOWN THE CANOPY

Step 8

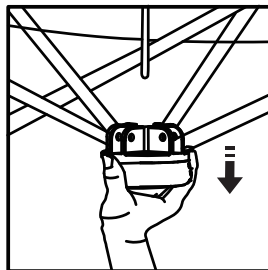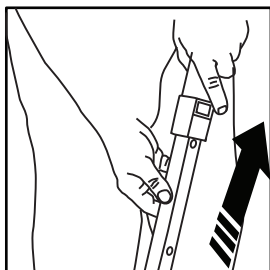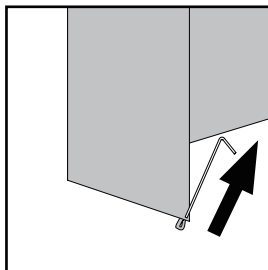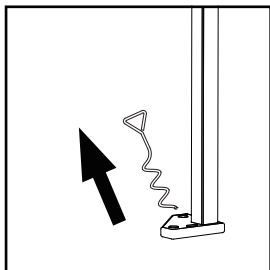

- Pull up all stakes from the ground.
- Press the push button on each leg and retract the legs to their original height.
- Get underneath the canopy. Pull the lower roof hub down till the frame partially closed and unlocked
- Take off the PE top, lift one corner of the frame until all legs are raised off the ground except for the 1 leg on the opposite corner. Push inward until the frame is fully closed.

www.ezyfast.net

Email: service@ezyfast.net

Code: 20JSEF00522

V1. 2021

