


EzyFast

Instruction Manual

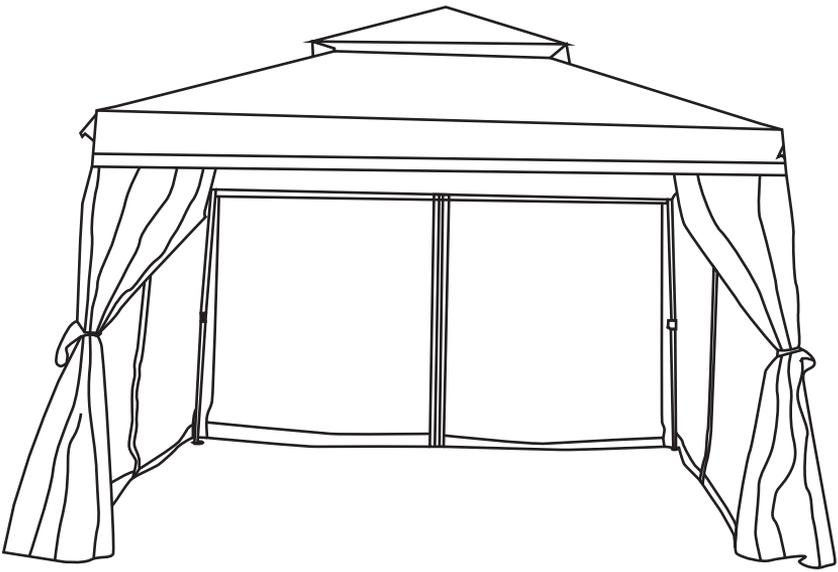

SKU: 20JS00042901
EZYFAST GAZEBO 12'X10'

WARNING:

- **KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.** This tent is made with fabric that meets CPAI-84 specification for flame resistance. It is not fire proof. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.
- **Always secure the gazebo with pegs and guy ropes. It's crucial to do this any time you have the gazebo up to minimize the impact of unexpected wind gust. Extra weight down at legs is highly recommended.**
- Do not use in extreme weather conditions. Do not use in lightning storms. Do not use in very windy weather. Do not over use in rainy weather. Take down the gazebo before extreme weather events.
- Be cautious when handling the frame. Avoid pinching hands or fingers in any moving parts as frame opens and closes.
- The gazebo is designed for temporary use, not a permanent structure. Do not leave up for extended periods and do not leave the gazebo unattended. Take down the gazebo and store away after use.
- Keep children away from the set up area.
- Utility Hook for small hanging object only. Do not hang any object heavier than 5 lbs. Check the hook every time before use. Do not use if it comes loose!
- Avoid twisting the frame during set up. Raise legs evenly. The frame tubes may break if you twist the frame too much.

CARE AND MAINTENANCE

- Wash frame and canopy with a mild solution of soap and water, rinse thoroughly. Dry completely. Do not use bleach or solvents.
- Inspect frame periodically to ensure all bolts and nuts are tight.
- Always return the gazebo to storage bag after use. Suggest to take the canopy off the frame for separate storage in the bag. Be sure the canopy is completely dry before storing it.

NOTES


NEVER forcefully setup or takedown.
NEVER twist the frame.
NEVER assume there is no-wind.
NEVER leave your shelter unattended.
NEVER use in prolonged raining situation.

CAUTION sudden wind can blow shelter over and cause damage.
CAUTION forceful operation can damage or destroy frame.
CAUTION any unattended shelter can cause serious injury and or damage.



ALWAYS anchor or weight down.
ALWAYS take down in wind greater than 15mph.
ALWAYS takedown in lighting storm.
ALWAYS refer to instruction manual.

SET-UP INSTRUCTIONS


IMPORTANT: DO NOT USE EXCESSIVE FORCE DURING ANY PART OF SET-UP!

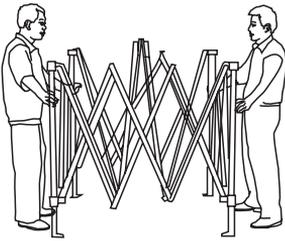


1. Stand frame upright. Starting at the corners, with partner standing on the opposite side, grasp the two outer legs, slightly lift the frame off the ground and step backward, stopping at full arms' length.

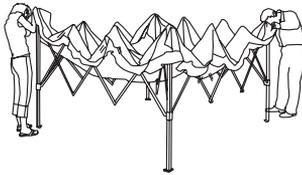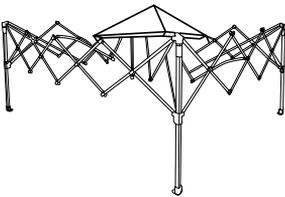

2. First, unpack the fabric canopy top and locate the small piece of fabric Vent Cover. Pull the corner pockets over the raised vent tubes on top frame. Second, place the main canopy top over the top frame. Match the Velcro Loop pads at 4 canopy corners to the Velcro Hook pads at 4 upper frame legs right under the plastic top caps.

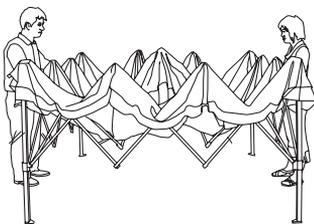

3. Each partner should then grasp the bottom of the middle frame section (cross beams) where it forms diamond. Lift slightly and slowly walk backward until the frame is fully extended. Be careful not to pinch your finger and not pull backward too hard as this may result in the bending of cross beams.

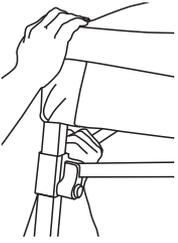

4. Engage the slider at each corner by pushing up the slider with one hand while holding down the top of the leg with the other hand until it locks in to place. Repeat this for the rest of corners.




5. Use the Velcro pads to secure each corner of the fabric top to the frame under the plastic leg caps.



6. To secure the fabric top to the frame, please wrap the hook and loop straps around roof tubes and cross beams.



7. Lift two adjacent outer legs and pull out inner legs gently until snap button pops in position. Repeat on the other two legs. **Please raise the legs in turns. Avoid twisting the frame too much during the process. It could break the frame tubes due to the excessive twisting or bending the frame.** The gazebo has three height levels. To adjust, lift the leg up, carefully depress the snap button and slowly pull out the inner leg till the snap button pops in next position. Repeat on the other legs. **Be careful do not overpull the leg.**

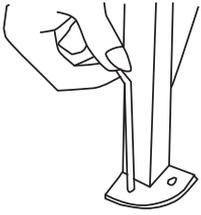


8. Peg down the gazebo by driving the 4 small pegs through one of the holes on the base of each foot. This will keep the legs from moving sideways in mild weather conditions.




9. Tie up one end of each guy rope to the triangular shaped rope holder located on the outside fabric corners. Pull the guy rope out from the corner of the gazebo towards the ground at a 45 degree angle. Hammer one of the larger pegs in to the ground and secure the guy rope firmly to it. Make sure the guy ropes have adequate tension.

THE GAZEBO MUST BE SECURED TO THE GROUND WITH ANCHORS AND GUY ROPES!

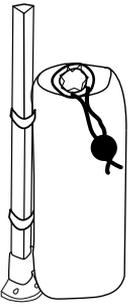

10. **A gust of wind may blow over the gazebo, make sure you weight down the gazebo.** The bonus weight bags may be provided for your convenience that you may fill them with sands or other heavy objects. Suggest you to have other stronger heavy weights to hold down the gazebo properly.

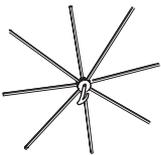

Warning: Utility Hook for small hanging object only. Do not hang any object heavier than 2kgs. Check the hook every time before use. Do not use if it comes loose!

 
SCREEN ASSEMBLY



1. Unpack the screen kit, locate the zipper end of the screen panel, position it in the middle of two legs. Place the screen out around the frame.



2. Match the screen up to frame. Attach the screen panels to cross tubes by hook & loop straps.



3. Tuck the upper corner of screen up into the corner of fabric valance. Secure to the upper corner frame with hook & loop straps.





4. Further secure screen to legs with hook & loop straps.



5. You may zip the screen all around to keep insects out. Or leave one side unzipped as an entrance, by adjusting the attachment location of screen panels at cross beams, you may hold back the screen panels with tiebacks for a drapery look.

SUGGESTED SCREEN USAGES

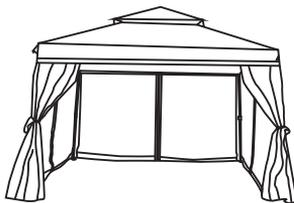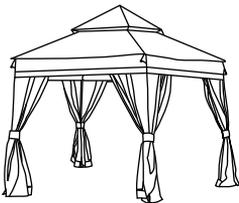


PACK-DOWN INSTRUCTIONS


IMPORTANT: DO NOT USE EXCESSIVE FORCE DURING TAKING-DOWN. PLEASE REMOVE ANCHORS AND GUY ROPES BEFORE TAKING-DOWN.




1. **Undo the hook and loop straps of the fabric top from around the roof tubes and cross beams. Failure to do so may tear the fabric during take-down.**
Remove spikes or weighted anchors.

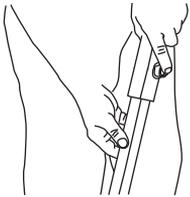


2. Release snap button on each leg and shorten the frame to its original height prior to extending the legs during set-up.

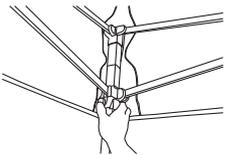


3. **Critical steps to avoid frame damage !**
Release sliders at all four corners depressing the push button and gently pushing the corners down slightly.

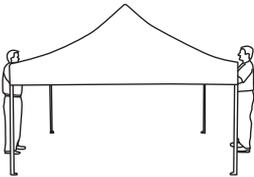


4. Suggest to remove the canopy top after use. In case leave the canopy top on, please double check all the straps are released and carefully **avoid fabric getting into the trusses which may cut and tear your fabric during the frame closing processes.**

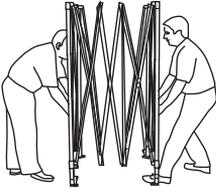

5. With partner on the opposite side, grasp the middle section of the frame and lift up slightly. Walk forward slowly allowing the frame to fold inward and close. **Be careful not to pinch fingers or hands as you close the frame.**

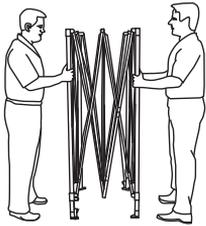

6. Grap the out legs and completely close the frame. It will fit into the bag.

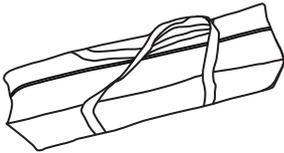

7. Put the compressed frame into the storage bag first and then the folded fabric top and screen. Make sure everything is completely dry before storing away.

www.ezyfast.net

Email: service@ezyfast.net

Code: 20JS00042901

V1. 2020

